

**RANE SL 3
FOR SERATO
SCRATCH LIVE**

DATA SHEET

The SL 3 connects one, two or three standard vinyl or CD turntables to your computer and the mixer of your choice. Using regular vinyl turntables, CD players or MIDI controllers, you can scratch and mix files from your Mac or Windows computer's CD or hard drive. This intuitive system replicates the traditional DJing experience for "real feel" usability. With unparalleled performance and stability, you'll soon see why thousands of DJs worldwide choose Rane with Serato Scratch Live.



RANE || SL3

ADVANCED THREE-DECK INTERFACE FOR PROFESSIONAL DJs

serato || SCRATCH LIVE

SL 3 FEATURE AND PERFORMANCE ENHANCEMENTS

- Supports up to three turntables or CD decks switchable in any combination.
- Aux Input for Live Mix Recording, LiveFeed or a third deck.
- Aux Output can be assigned to the SP-6 Sample Player or a third deck.
- Stack mode allows all three decks on the screen at once.
- Independent Line / Phono-level selection for each input for greater flexibility.
- 6-in 6-out sound card with any software supporting ASIO or Core Audio.
- Software and driver-switchable Direct Thru connections for simplicity.
- External power supply included to provide Direct Thrus without a computer.
- Includes two control records, two CDs, cables and a soft zippered carry case.

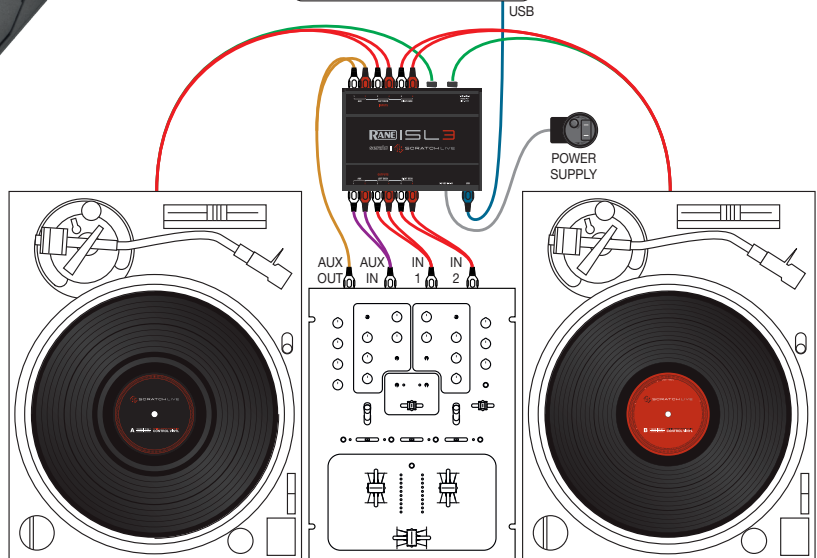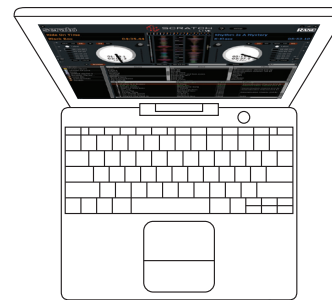

The SL 3 builds on the success of the SL 1 with several enhancements. The auxiliary input provides a live input feed for creative sampling, recording your set or using a third vinyl turntable or CD deck. The auxiliary output delivers a third deck or the SP-6 sampler output right to your mixer. Studio grade phono preamps and 24-bit audio processing deliver exceptional sound. The high-grade phono preamps in the SL 3 will upgrade the sound performance of most mixers.

See software details in the Scratch Live Data Sheet, or at www.serato.com.

SL 3 SPECIFICATIONS	(all specs typical)
Computer interface	USB 2.0 High Speed
USB Power Requirement	400 mA, 5.0 Volts
USB Audio Channels	Six Record and Six Playback
External Power Supply	1060 mA, 7.5 Volts
Converters	24-bit / 44.1 kHz or 48 kHz sample rate
DAC Dynamic Range	104 dB, A-weighted
Line Thru Dynamic Range	101 dB, A-weighted
Phono Thru Dynamic Range	98 dB, A-weighted
THD+N	0.009% at 1 kHz at 2 Vrms
Frequency Response	20 Hz to 20 kHz +0, -3 dB
All Inputs Phono or Line Level	Switchable
Line Input	Unbalanced RCA
.....Gain	Unity
.....Maximum Input / Output	3 Vrms
Phono Input	Unbalanced RCA
.....Sensitivity	Adjustable 2.5 mV to 10 mV
SL 3 Unit Size	6.8" x 5" x 1.3" (17.3 x 12.6 x 3.3 cm)
Shipping: Size	14" x 14" x 4" (36 x 36 x 10 cm)
.....Weight	5 pounds (2 kg)

CORE AUDIO & ASIO DRIVERS

These included drivers allow the SL 3 to act as a 6-in 6-out USB external sound card for use with multiple third-party software clients supporting Core Audio (Mac) or ASIO (Windows).

SERATO CONTROL

Mix and scratch files from your computer hard drive using Serato Control Vinyl, Serato Control CD or Approved USB Controllers.

Serato Control Vinyl and Control CD

The Serato Control Vinyl and Control CDs each contain the Noise Map Control Tone, a unique control signal which allows Scratch Live to track the motion of the record, simulating the same movement with digital audio.

Serato Approved USB Controllers (optional)

Serato has certified a select range of new generation controllers with USB connectivity to Scratch Live. This means that Scratch Live can now send track information from the software to the supported hardware on-board displays. You can also use the platters, buttons and sliders instantly, as supported hardware has pre-mapped controls for a no-fuss setup. Check serato.com for the latest Serato Approved USB Controllers.

INCLUDED IN THE BOX

The Rane SL 3 is only sold as part of a complete package. The display box includes:

- SL 3 hardware interface
- 4 rubber feet for the SL 3
- Soft SL 3 carry case
- USB cable
- 4 stereo RCA cables
- Printed color manual
- Quick Start / Keyboard Shortcuts page
- 2 Control Vinyl Records
- 2 Control CDs
- Scratch Live software install disc
- External universal power supply with country adaptors.



SCRATCH LIVE MINIMUM COMPUTER REQUIREMENTS

Before purchasing a Mac or PC, please check one of these sources for best results with the latest version of Scratch Live:

- www.serato.com
- www.rane.com
- Scratch Live Data Sheet

NOTE: If you are using Scratch Live's more system-intensive features such as DJ-FX or AUX Deck plugins, or the optional Video-SL plugin, you may need a higher spec computer. See the Computer Optimization Guide for Digital DJs at www.serato.com.

SERATO.COM

New features are always being added and improved, and the latest version of Scratch Live is a free download. The Forum at serato.com is the best place for technical support and performance tips from thousands of other DJs.

WHITELABEL.NET

The Serato Whitelabel Delivery Network is a unique system that allows record labels to digitally deliver promotional releases directly to Scratch Live DJs. To download Whitelabel audio files and sign up for updates on the latest promotional releases, visit whitelabel.net.

RANE.COM

Visit the Rane website for the most up-to-date information on all Rane hardware, manuals, accessories, RaneNotes, and the Rane Pro Audio Reference.

© 2011 Rane Corporation

© 2011 Serato Audio Research

Windows XP, Vista and 7 is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries.

Apple, Mac and Macintosh are trademarks of Apple Computer, Inc., registered in the US and/or other countries.

Scratch Live and the Scratch Live logo are trademarks of Serato Audio Research.

Scratch Live is licensed exclusively to Rane Corporation, 10802 47th Ave. W., Mukilteo WA 98275 USA TEL 425-355-6000 WEB www.rane.com. All rights reserved.